



Nothing else measures up!

Follow us! York Survey Supply Centre @York_Survey @York_Survey

Prospect House George Cayley Drive Clifton Moor York England YO30 4XE

Tel: +44 (0) 1904 692723 Fax: +44 (0) 1904 690385

E-Mail: sales@yorksurvey.co.uk





Digital Min/Max Memory Thermo-Hygrometer



Operating Instructions

Digital Min/Max Memory Thermo-Hygrometer

with remote probe for external/remote temperature



The Ideal combined Instrument for environmental monitoring. With the Hygro-therm, you have acquired a precision electronic instrument for measuring, the temperature, humidity and the current highest and lowest values of both (Max-Min function)

Features:

- Dual Display for Humidity/Temperature reading
- Maximum/Minimum Humidity and Temperature memory
- °C/°F Exchange
- Freeze Alert Function
- Foldaway Stand
- · Remote probe for external/remote temperature

Specifications

•	
Measurement Range:	-50 to +70°C, 20 to 99%
Accuracy:	±1°C, ±5%
Display Resolution:	0.1°, 1%
Display Size:	36(W) x 16(H)mm
Sampling Rate:	10 seconds
Freeze Alert:	Alert on 5 sec/off 55 sec when temperature is in between
	-1 to +4°C
Battery:	1.5v size AAA/UM4 x 1 piece (included) code:53086
Product Size:	65(W) x 97(H) x 20(D)mm/2.56(W)" x 3.82(H)" x 0.79(D)"

1. Installation

- Pull down the battery cover install the battery. (The polarity is shown on the back of the removal cover). The instrument will then automatically switch on.
- · To switch On/Off press the recessed button on the back.
- · Flip out stand for desk mounting or fix to wall with screw hanger.

2. °C/°F Select

• Press [°C/°F] to select the temperature unit.

3. Maximum & Minimum Temperature Memory Display

- Press [MAX/MIN] to display maximum temperature and humidity reading (MAX symbol will be displayed).
- Press [MAX/MIN] again to display minimum temperature and humidity reading (MIN symbol will be displayed).
- Press [MAX/MIN] again to take instant temperature reading.
- Press and hold [MAX/MIN] one second to reset minimum and maximum temperature memory.

4. Freeze Alert

- Press [ALERT SET] to enable freeze alert function (ALERT symbol will be displayed)
- Press [ALERT SET] again to disable freeze alert function.

5. Remote Probe

- Attach remote probe if required and fasten in place with the bracket as required.
- · Press OUT DOOR for temperature from remote probe.

Other Thermometers

York Survey Supply Centre stock a range of both general purpose and specialist thermometers, hygrometers etc,

Please call for details