

readings.  
NOTE: The meter will keep recording MAX/MIN/AVG readings.  
5. To clear and stop MAX/MIN/AVG recording and return to normal operation, press and hold the **MAX/MIN** button until the meter beeps twice.

#### Automatic Power OFF

To conserve battery life, the meter automatically turns off after 20 minutes. To defeat this feature:

1. Turn the meter OFF.
2. Press and hold the  $\star$  (Backlight) key while turning the meter ON.
3. "dis APO" will appear in the display. The AUTO POWER OFF feature will now be disabled.
4. Note that AUTO POWER OFF is re-enabled each time the meter is turned on.
5. Also note that AUTO POWER OFF is disabled in CFM/CMM or Average mode.

#### Battery Replacement

When  $\text{E}$  appears on the LCD, the 9V battery must be replaced.

1. Disconnect the sensor.
2. Remove the meter's rubber protective jacket.
3. Use a Phillips screwdriver to open the rear battery compartment.
4. Replace the 9V battery.
5. Close the battery compartment and replace the meter's protective jacket.

#### Specifications

Air Velocity	Range	Resolution	Accuracy
m/s (metres per sec)	0.40 - 30.00 m/s	0.01 m/s	$\pm(3\% + 0.20 \text{ m/s})$
km/h (kilometres/hour)	1.4 - 108.0 km/h	0.1 km/h	$\pm(3\% + 0.8 \text{ km/h})$
ft/min (feet per minute)	80 - 5900 ft/min	1 ft/min	$\pm(3\% + 40 \text{ ft/min})$
mph (miles per hour)	0.9 - 67.0 mph	0.1 mph	$\pm(3\% + 0.4 \text{ mph})$
knots (nautical MPH)	0.8 - 58.0 knots	0.1 knots	$\pm(3\% + 0.4 \text{ knots})$
Air Flow	Range	Resolution	Area
CMM (cubic metres/min)	0 - 999900m <sup>3</sup> /min	0.001 to 100	0.000 to 999.9m <sup>2</sup>
CFM (cubic ft/min)	0 - 999900ft <sup>3</sup> /min	0.001 to 100	0.000 to 999.9ft <sup>2</sup>
Air Temperature	Range	Resolution	Accuracy
	-10 - +60°C (14 - 140°F)	0.1°C/F	2.0°C (4.0°F)

**Circuit:** Custom LSI microprocessor circuit

**Display:** Dual function 0.7" (16mm) 4-digit LCD

**Sampling rate:** 1 reading per second approx.

#### Sensors:

Air velocity/flow sensor: Conventional angled vane arms with low-friction ball bearing.

Temperature Sensor: NTC - type precision thermistor.  
**Automatic Power Off:** Auto shut off after 20 minutes to preserve battery life.  
**Operating Temperature:** 0 to +50°C (+32 to +122°F)  
**Storage Temperature:** -10 to +60°C (+14 to +140°F)  
**Operating Humidity:** <80%RH  
**Storage Humidity:** <80%RH  
**Operating Altitude:** 2000m (7000ft) maximum  
**Battery:** 1x 9V PP3 Alkaline  
**Battery Life:** 80 hours approx. (if Backlight is used continuously, battery life will be reduced significantly).  
**Battery Current:** 8.3mA DC approx.  
**Weight:** 725g (including battery and probe)  
**Dimensions:**  
Main instrument: 203 x 75 x 50mm  
Sensor head: 70mm diameter

#### Useful Equations and Conversions


Area equation for rectangular or square ducts



Height (H)

$$\text{Area (A)} = \text{Width (W)} \times \text{Height (H)}$$

Area equation for circular ducts

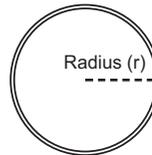

$$\text{Area (A)} = \pi \times r^2$$

Where  $\pi = 3.14$  and  $r^2 = \text{radius} \times \text{radius}$

#### Cubic Equations

$$\text{CFM (ft}^3/\text{min)} = \text{Air Velocity (ft/min)} \times \text{Area (ft}^2\text{)}$$

$$\text{CMM (m}^3/\text{min)} = \text{Air Velocity (m/sec)} \times \text{Area (m}^2\text{)} \times 60$$

NOTE: Measurements made in inches must be converted to feet or metres before using the above formulae.

#### Unit of Measure Conversion Table

	m/s	ft/min	knots	km/h	mph
1 m/s	1	196.87	1.944	3.6	2.24
1 ft/min	0.00508	1	0.00987	0.01829	0.01138
1 knot	0.5144	101.27	1	1.8519	1.1523
1 km/h	0.2778	54.69	0.54	1	0.6222
1 mph	0.4464	87.89	0.8679	1.6071	1

# YORK Survey Supply

## Vane Velocity Thermo-Anemometer



## Operating Instructions



#### Follow us!

York Survey Supply Centre  
@York\_Survey  
@York\_Survey

Prospect House, George Cayley Drive, Clifton Moor, York, England YO30 4XE

Tel: +44 (0) 1904 692723 Fax: +44 (0) 1904 690385  
E-Mail: sales@yorksurvey.co.uk www.yorksurvey.co.uk

# Vane Velocity Thermo-Anemometer

## Introduction

The CFM/CMM Thermo-Anemometer instrument measures Air Velocity, Air Flow (volume) and Temperature. The large, easy-to-read backlit LCD includes primary and secondary displays plus numerous status indicators. The meter is shipped fully tested and calibrated and with proper use will provide years of reliable service.

## Meter Description




1. LCD Display
2. Meter
3. Vane
4. Temperature Buttons
5. Power On/Off
6. Airflow/Velocity Buttons
7. AVG
8. Backlight

## Keypad

- **POWER** Press to turn the meter ON or OFF
- **MAX/MIN** Used to record and store the highest, lowest and average airflow or velocity readings.
  - ◀ (LEFT) also serves as change decimal point button in AREA mode.
- **UNITS** Press to select the mode of operation. In FLOW mode, the meter displays air volume. In VELOCITY mode, the meter displays air speed.
  - ▲ (UP) also serves as increase number button in AREA mode.
- **AVG** Used to Average multiple readings in FLOW or VELOCITY mode. Up to 20 readings can be averaged.
- **HOLD** Press to freeze the displayed reading. Press again to unlock display, this button also functions as the ▶ (RIGHT) scroll button in AREA mode.
- **AREA/NEXT** Press and hold to manually enter the area of a duct in CFM or CMM mode. In AREA mode, used to select memory locations 1-8.
- ☼ Press to turn the backlight on/off.
- **MAX/MIN (Temperature)** Used to record and store the highest and lowest readings for air temperature.
- **°C °F HOLD (Temperature)** Press to freeze the displayed temperature reading. Press again to unlock the display. Press and hold for 3 seconds to switch between °C and °F.

Meter will beep twice to indicate change. Battery compartment located on the back of the instrument. The rubber protective jacket must be removed from the meter to access the compartment.

## Display Layout

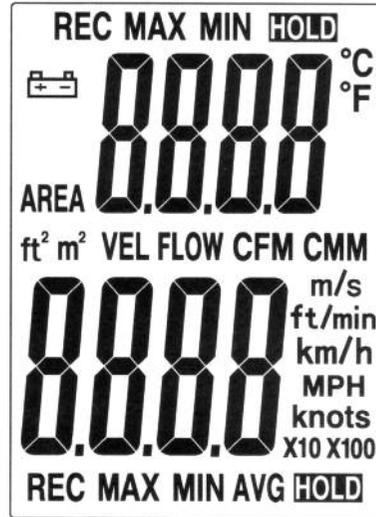

- **MAX** (top of LCD): Max Hold function engaged for the Air Temperature function
- **HOLD** (top of the LCD): Data Hold function engaged for the Air Temperature function
- **VEL**: Indicates that meter is in air velocity mode
- **FLOW**: Indicates that the meter is in air flow mode
- **MAX** (bottom of LCD): Max Hold for the Air Velocity and Air Flow function
- **HOLD** (bottom of LCD): Data Hold for the Air Velocity and Air Flow function
- °C/°F Temperature units of measure
- CFM/CMM: Airflow units of measure
- **AREA (ft<sup>2</sup>/m<sup>2</sup>)**: Units for area dimensions
- **m/s, ft/min, km/h, MPH, knots**: air velocity units of measure
- **X10, X100**: Multipliers for air flow readings
- **AVG**: Air averaging mode
- **REC**: Indicates that min/max function is running (top for temp, bottom for air)
- Large LCD digits at bottom at bottom of display for Air Velocity and Air Flow
- Smaller LCD digits at top, right of display for Probe Temperature
- 🔋: Low battery indicator

## Operation


### Connecting the Vane

1. The vane plug is inserted in the meter's sensor jack at the top of the meter. The plug and jack are keyed so that the plug can only fit in the jack one way.
2. Turn the plug carefully until it lines up with the jack and then firmly push the plug in place. Do not apply undue force or try to twist the plug side-to-side.
3. If the vane is not connected to the meter or if the sensor is defective, the LCD display will indicate **OL** in place of a temperature reading.

## Air Velocity Measurements (Single Point)

1. Turn on the meter using the ON/OFF ⏻ button.
  2. Press **UNITS** button to select the desired unit of measure.
- NOTE: At power up the meter will display the last unit of measure previously entered.
3. Place the sensor in the air stream. Ensure that the air enters the vane as indicated by the arrow sticker placed inside the vane.
  4. View the readings on the LCD Display. The large main LCD display shows the Air Velocity reading. The upper right LCD sub-display shows the temperature reading.

### Side view of Vane

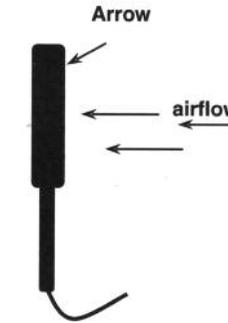


## Air Velocity Averaging Mode

1. To enter 20 Point Averaging Mode, press and hold the **AVG** button until it beeps twice. The **AVG** icon will be displayed.
  2. Take a measurement and press the **AVG** button. A single beep will sound and the **HOLD** icon will appear in the display.
  3. The average reading will be displayed and number of readings measured will appear in the upper right hand corner of the display. After 5 seconds, the display will return to the current reading.
  4. Repeat steps 2-3 until the desired number of points have been measured.
  5. To return to standard velocity measuring mode press and hold **AVG** button until meter beeps twice.
- Note: In the standard velocity measuring mode, press the **AVG** button once to recall the previous average. The average will be cleared when you enter the Averaging Mode again.

## Air Flow Measurements (CMM/CFM)

1. Turn on the meter using the ON/OFF ⏻ button.
  2. Press the **UNITS** button to select the desired air flow units: CMM (cubic metres per minute) or CFM (cubic feet per minute).
- NOTE: At power up the meter will display the last unit of measure previously entered.
3. To begin entering the area in m<sup>2</sup> or ft<sup>2</sup>, press and hold the **AREA** button until it beeps twice. The leftmost digit of the bottom display will begin to flash.
  4. Use the ▲ (UP) button to change the flashing digit. Use the ◀ (LEFT) button to move the decimal. Use the ▶ (RIGHT) button to select other digits. After all the digits are entered, press and hold the **AREA** button (until the meter beeps twice) to save the area into memory and return to CFM or CMM measuring mode.
  5. Place the sensor in the air stream. Ensure that the air enters the vane as indicated by the arrow sticker placed inside the vane. Refer to the diagram. The large main LCD

### Side view of Vane

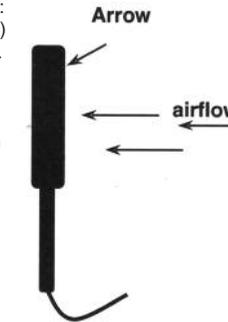

display shows the Air Velocity reading. The upper right LCD sub-display shows the temperature reading. The meter has 16 memory locations (8 for CFM and 8 for CMM) that can be used to store commonly used area sizes that you can recall at any time.

1. Press the **AREA** button until meter beeps twice. A memory location number will appear in the top right of the display indicating the memory location.
2. Push the **NEXT** button to scroll through and select the desired location. Once you have selected the desired memory location enter your dimension. Use the ▲ (UP) button to change the flashing digit. Use the ◀ (LEFT) button to move the decimal. Use the ▶ (RIGHT) button to select other digits. After all the digits are entered, press and hold the **AREA** button (until the meter beeps twice) to save the area into memory and return to CFM or CMM measuring mode. To select and use a previously stored dimension, press and hold the **AREA** button until it beeps twice. Press **NEXT** to scroll through the 8 memory locations. Press and hold the **AREA** button until it beeps twice to return to CFM or CMM measuring mode.

## Air Flow Averaging Mode

1. To enter 20 Point Averaging Mode, press and hold the **AVG** button until it beeps twice. The **AVG** icon will be displayed.
  2. Take a measurement and press the **AVG** button. A single beep will sound and the **HOLD** icon will appear in the display.
  3. The average reading will be displayed and number of readings measured will appear in the upper right hand corner of the display. After 5 seconds, the display will return to the current reading.
  4. Repeat steps 2-3 until the desired number of points have been measured.
  5. To return to standard air flow measuring mode press and hold **AVG** button until meter beeps twice.
- Note: In the standard air flow measuring mode, press the **AVG** button once to recall the previous average. The average will be cleared when you enter the Averaging Mode again.

## Data Hold (Air Velocity/Air Flow)

1. While taking measurements, press the **HOLD** button to freeze the air velocity/air flow reading.
2. The **HOLD** indicator will appear in the bottom of the LCD display.
3. Press **HOLD** to return to normal operation.

## MAX/MIN/AVG Record (Air Velocity/Air Flow)

This allows the user to record and view the highest (MAX), lowest (MIN) and average (AVG) readings.

1. Press the **MAX/MIN** button. The **MAX** indicator and **RECORD** indicator along with the Max reading will appear on the LCD display and the meter will begin keeping track of the MAX, MIN and Average values.
2. Press the **MAX/MIN** button again to view the minimum reading. The **MIN** indicator along with the minimum will appear on the LCD display.
3. Press the **MAX/MIN** button again to view the average reading. The **AVG** indicator along with the average reading will appear in the LCD display.

NOTE: Average recording will stop automatically after 2 hours and the upper LCD display will show **OFF** (only in the average mode).

4. Press the **MAX/MIN** button again to display current