

YORK

Survey Supply



Nothing else measures up!

Follow us!

- York Survey Supply Centre
- @York_Survey
- @York_Survey

Prospect House
George Cayley Drive
Clifton Moor
York
England
YO30 4XE

Tel: +44 (0) 1904 692723
Fax: +44 (0) 1904 690385

E-Mail: sales@yorksuey.co.uk

YorkSurvey.co.uk
...for secure online ordering of all our products!

YORK

Survey Supply

Viking V5 Metal Detector



Operating Instructions

Operating Instructions for the Viking V5 Metal Detector

HOW TO TUNE AND USE YOUR DETECTOR -

When you have assembled your detector, make sure that the cable is wrapped around the shaft so that it doesn't hang loose.

The Viking V5 operates from a single PP3 battery. At the bottom of the control box you will find a drawer that slides out. Engraved in the bottom of the drawer is indicated which way round the battery is inserted. Fit in a single PP3 battery and simply slide back in.

MAKE ABSOLUTELY SURE THAT THE BATTERY IS PLACED IN THE CORRECT WAY AS THE DETECTOR WILL NOT WORK

On the top of the box you will see two controls, one being OFF-ON FINE TUNE control - and one being COARSE TUNE. With both controls fully anti-clockwise, switch the detector ON by turning the FINE TUNE control clockwise and set around midway. While holding the detector, position the search head so that is parallel to the ground or approx 2 inches (5cm) making sure that the search head is kept away from metal. Turn the COARSE TUNE clockwise until a sound is heard and then turn slightly back so that the sound almost disappears. This point is known as THRESHOLD and is the detector's most sensitive position. By adjustment of the FINE TUNE control this will enable you to maintain THRESHOLD.

With your detector now tuned to THRESHOLD, by lowering your search head towards the ground the faint sound will disappear and by raising the detector the sound will become louder. These are normal reactions and do not necessarily indicate the presence or lack of buried objects.

Therefore by keeping the search head parallel to the ground commence by sweeping the ground from side to side in an arc fashion with the search head as close as possible to the ground. Retuning may be necessary to maintain THRESHOLD. On hearing a sharp note, this indicates that a small metallic object is present and a long note indicates a larger object. Strength of note is also dependant on the depth of the object.

A headphone socket is situated next to the two tuning controls. By plugging in stereo type headphones this cuts out the loudspeaker in your detector. Headphones give slightly more sensitivity as they cut out external noises which can interfere with your ability to hear weaker signals which are usually deeper.

SERVICE

For all servicing issues, please contact us at the address below:

**YORK SURVEY SUPPLY CENTRE, PROSPECT HOUSE, GEORGE CAYLEY DRIVE,
CLIFTON MOOR, YORK, YO30 4XE**

TELEPHONE: 01904 692723

FAX: 01904 690385

